



Alesta

Alesta and Alesta LX

User's Manual
and
Warranty Certificate



Imported by T R Imports Inc
Fort Worth, Texas

Operating Instructions



1. Remove the gun from its case and rotate the barrel to the fully closed position.



2. To load, press the action lever and open the action. **USE ONLY 3" OR SHORTER .410 SHELLS.** Close the gun firmly.



3. When ready to shoot, keeping the gun pointed in a safe direction, cock one or both barrels by pulling back the hammer(s) carefully and firmly. The rear trigger discharges the left barrel, and the forward trigger the right barrel.

4. **Caution:** the Alesta is a traditional hammer-fired gun. When the hammers are cocked, it is always ready to fire. It can be placed in the "safe" state only by manually decocking the hammers. **Always keep the gun pointed in a safe direction, and do not cock the hammers until you are ready to fire.** Decocking before storage will extend the life of the hammer springs.



5. To store your gun, press the barrel latch button and rotate the barrels to the folded position.

Additional Information

Exposed surfaces are anodized or hard chrome, a material harder than steel. The barrels are machined from solid C4140 high chrome molybdenum steel and chrome plated for ultimate smoothness and resistance to corrosion.

Important Safety Information

This gun is intended for use only by responsible adults properly trained in the safe use and maintenance of firearms, and by other individuals only under the thorough supervision of such adults. User's manuals such as this cannot address every aspect of safe use, and by your use of this firearm you accept responsibility for maintaining the requisite knowledge in the safe handling and use of firearms.

Routine Maintenance

After shooting, clean your Alesta as you would any other gun, using solvent and absorbent patches. While the exterior surfaces of the barrels, the bores, and receiver are impervious to rust, exposed steel, such as at the end of the barrels and the chambers should receive a final coat of light oil or gun grease before storing. It is expected that the stock will occasionally be exposed to water, but it should be dried thoroughly as soon as practical, and always before being placed in its case.

Warranty

Your gun is warranted against defects in material or workmanship for a period of two years from date of sale. When you register your purchase on our web site, your warranty will automatically be extended to five years. Warranty covers all parts and labor and return shipping within the U.S., Puerto Rico, Alaska and Hawaii. If your gun requires service outside the warranty period, please contact us anyway; we stand behind our products and are here to support you for as long as you own them. For further details, or to download updates to this manual, please visit us at www.trimports.com/support.

To Obtain Service

Telephone:

DFW Area (817) 750-2291

Email: support@trimports.com

U.S. Address:

T R Imports Inc
5778 Park Vista Cir Ste 302
Fort Worth, TX 76244

For questions, suggestions, or to discuss anything not covered in this manual, please call us, 9am-5pm Central, Monday-Friday. We thank you for the confidence you have shown in our products, and we look forward to hearing from you.

Thank you!